

COCKPIT PREPARATION	
FUEL	LOAD
PAYLOAD	LOAD
PARKING BRAKE	SET
BATTERIES 1 + 2	ON
EXTERNAL POWER	ON
FUEL PUMPS	ON
OXYGEN CABIN SUPPLY	ON
NAVIGATION LIGHTS	ON
ENGINE MASTER SWITCHES	OFF
ENGINE MODE SELECTOR	NORM
TRANSPONDER MODE	STANDBY
RADIO CONTROL PANEL	CHECK
ECAM RECALL BUTTON	PRESS
FLIGHT DIRECTOR	ON
EMERGENCY LIGHTS	ARM
PASSENGER SIGNS	ON
ADIRS	ON

FMGS DATA	
INIT 1	ENTER
F-PLAN	ENTER
RAD NAV	ENTER
INIT 2	ENTER
PERF-TO	ENTER
EFIS	SET

BEFORE START	
CLOSE ALL DOORS	CHECK
SEAT BELT / NO SMOKING	ON
APU MASTER	ON
APU START	ON
APU BLEED	ON
THRUST LEVERS	CHECK IDLE
PARKING BRAKE	ON
EXTERNAL POWER	DISCONNECT
WHEEL CHOCKS	REMOVE
BARO REF	CHECK
BEACON	ON

ENGINE START	
PARKING BRAKE	OFF
PUSHBACK	START
ENG MODE SEL	IGN START
MASTER SW 2	ON
NO. 2 RUNNING UP	CHECK
MASTER SW 1	ON
NO. 1 RUNNING UP	CHECK
PARKING BRAKE	ON

AFTER START	
ENG MODE SEL	NORM
APU BLEED	OFF
APU MASTER	OFF
RUDDER TRIM	CHECK
FLIGHT CONTROLS	CHECK
PITCH TRIM	SET
FLAPS	SET
GROUND SPOILERS	ARM
ANTI ICE	CHECK
ECAM STATUS	CHECK
HAND SIGNAL	RECEIVED

BEFORE TAXI	
NOSE LIGHT	TAXI
RUNWAY TURNOFFS	AS NEEDED
PEDAL DISCONNECT	SET
AUTO BRAKE	MAX
TAKEOFF DATA	REVIEW
TO CONFIG	PRESS
TO MEMO	NO BLUE
WXR	ON
TRANSPONDER	SET
PARKING BRAKE	OFF

BEFORE TAKEOFF	
BRAKE TEMP	CHECK
ENG MODE SEL	CHECK
TCAS TA/RA plus TILT ABOVE	SET
LANDING LIGHTS	ON
STROBES	ON
PEDAL DISCONNECT	SET
CHRONO	START
SET LEVERS TO	MAN TOGA

AFTER TAKEOFF	
GEAR	UP
CLIMB THRUST	CHECK
AUTOPILOT	ON
FLAPS	UP
GROUND SPOILERS	DISARM
PACKS	CHECK
BARO REF	CHECK
LANDING LIGHTS 10.000 FT	OFF

CRUISE	
SEAT BELTS	OFF
SLIDING TABLE	EXTENDED
FLIGHT PROGRESS	MONITOR

DESCENT	
SLIDING TABLES	STOWED
MCDU PERF APPR	ENTER
SEAT BELTS	ON
ANTI ICE	CHECK
LANDING INFORMATION	RECEIVED
DECISION ALTITUDE	CHECK
ILS LOCALIZER	PUSH
LANDING LIGHTS 10.000 FT	OFF
BARO REF	CHECK

LANDING	
FLAPS	SET
LANDING GEAR	DOWN
GROUND SPOILERS	ARM
AUTO BRAKES	SET
GO AROUND ALT	CHECK

AFTER LANDING	
CHRONO	STOP
FLAPS	UP
GROUND SPOILERS	DISARM
NOSE LIGHTS	TAXI
LANDING LIGHTS	OFF
STROBE LIGHT	OFF
TCAS	OFF
WXR	OFF
ILS LOCALIZER	OFF
APU MASTER	ON
APU START	ON
APU BLEED	ON

PARKING	
TAXI LIGHT	OFF
PARKING BRAKE	SET
ENG MASTER 1 & 2	OFF
BEACON LIGHT	OFF
FUEL PUMPS	OFF
CHOCKS	SET
EXTERNAL POWER	CONNECT
EXTERNAL POWER	ON
APU MASTER	OFF
SEAT BELTS	OFF
DOORS	OPEN

SECURE	
ADIRS	OFF
NAVIGATION LIGHTS	OFF
NO SMOKING & EMERGENCY LIGHT	OFF
DOORS	CLOSED
EXT PWR	OFF
GENERATORS 1+ 2	OFF
RADIO CONTROL PANEL	OFF
TCAS	OFF
BATTERIES 1 + 2	OFF