

PRE-FLIGHT	
BATTERY SWITCH	ON
PARKING BRAKE	SET
EXTERNAL POWER	CONNECTED
FUEL	LOAD
PAYLOAD	LOAD
IRS	ON
FD DOOR POWER	ON
WINDOW HEAT	ON
PASSENGER SIGNS	AUTO/ON
L&R PACK SWITCHES	AUTO
NAV LIGHT	ON
LOGO LIGHT	AS NEEDED
FMC INIT	SET

COCKPIT PREPARATION	
ATIS	OBTAIN
FMC	PROGRAM
MCP	SET
ALTIMETER	SET
A/T	SET
FLIGHT DIRECTOR SWITCHES	ON
LNAV/VNAV	SET
IAS	SET
HDG	SET
ALT	SET
AUTOBRAKE	RTO
COMM PANEL	SET
TCAS	SET

BEFORE START	
APU	START/ON
CABIN AND CARGO DOORS	CLOSED
HYDRAULIC PUMPS	AUTO/ON
FUEL PUMP SWITCHCES	ON
BEACON LIGHT	ON
PUSHBACK	START
PARKING BRAKE	OFF

ENGINE START	
ENGINE 2&1	START
FUEL CONTROL SWITCHES	ON

BEFORE TAXI	
ENGINE GENERATOR SWITCHES	ON, LIGHTS OFF
APU SELECTOR SWITCH	OFF
FLAPS	SET
STABILIZER TRIM	SET
FLIGHT COTROLS	CHECK
TAXI LIGHT	ON
RUNWAY TURNOFF LIGHTS	AS NEEDED

BEFORE TAKE-OFF	
LANDING LIGHTS	ON
STROBE LIGHTS	ON
TRAFFIC MODE	ON
TRANSPONDER MODE	TA/RA

AFTER TAKE-OFF	
LANDING GEAR	UP
FLAPS	UP
ABOVE 10.000 FT	LDG LIGHTS OFF
SEAT BELT SIGNS	AS DESIRED
TRANSITION ALTITUDE	STD

DESCENT	
FMC	PROGRAM
FLIGHT INSTRUMENTS (NAV,ALT)	SET
TRANSITION ALTITUDE	SET QNH
AUTOBRAKE	AS REQUIRED
VREF	SET
MINIMUMS	SET

BEFORE LANDING	
BELOW 10.000 FT	LDG LIGHTS ON
SPEED BRAKES	ARM
SEAT BELT SIGNS	ON
ALTIMETERS	SET QNH

AFTER LANDING	
LANDING LIGHTS	OFF
STROBE LIGHTS	OFF
TAXI LIGHT	ON
APU SELECTOR SWITCH	START/ON
AUTOBRAKE	OFF
SPEED BRAKES	DOWN
FLAPS	UP
TRANSPONDER MODE	STDBY

SHUTDOWN	
PARKING BRAKE	SET
TAXI LIGHT	OFF
FUEL CONTROL SWITCHES	CUTOFF
SEAT BELT SIGNS	OFF
BEACON LIGHT	OFF
HYDRAULIC PUMPS	OFF
FUEL PUMP SWITCHCES	OFF
FLIGHT DIRECTOR SWITCHES	OFF
EXTERNAL POWER	CONNECTED
APU SELECTOR SWITCH	OFF

SECURE	
IRS	OFF
EMERGENCY EXIT LIGHTS	OFF
L&R PACK SWITCHES	OFF
EXTERNAL POWER	OFF
BATTERY SWITCH	OFF